


INSTRUMENT AERODROME ELEV. 95 ft
 APPROACH HEIGHTS RELATED TO
 CHART AERODROME ELEV.


TWR: 122.1, 234.5

VTBH
 6 JAN 14
 SAPHAN NAK/Saphan nak
VOR
RWY 19

FOR AAVNS TRAINING ONLY

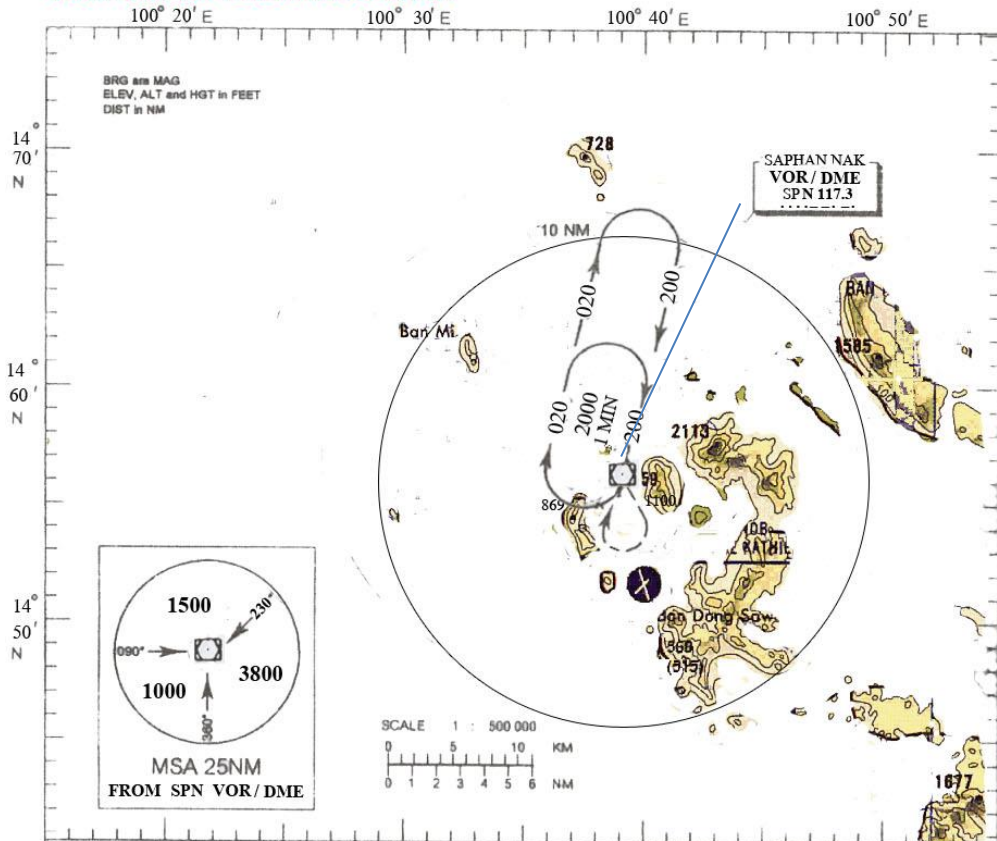

TA 11000

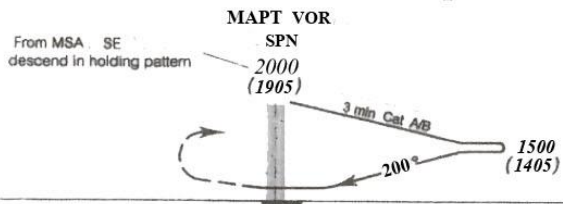

MISSED APPROACH : Climb left turn to HDG 155 to ALT 1000 ft or above then turn right direct to SPN and hold or as directed by ATC


CATEGORY	A	B
Straight - In approach	500 (405)	
Circling	700 (605)	800 (705)

INSTRUMENT AERODROME ELEV. 95 ft
 APPROACH HEIGHTS RELATED TO
 CHART AERODROME ELEV.


TWR: 122.1, 234.5

VTBH
 6 JAN 14
 SAPHAN NAK/Saphan nak
NDB
RWY 19

FOR AAVNS TRAINING ONLY

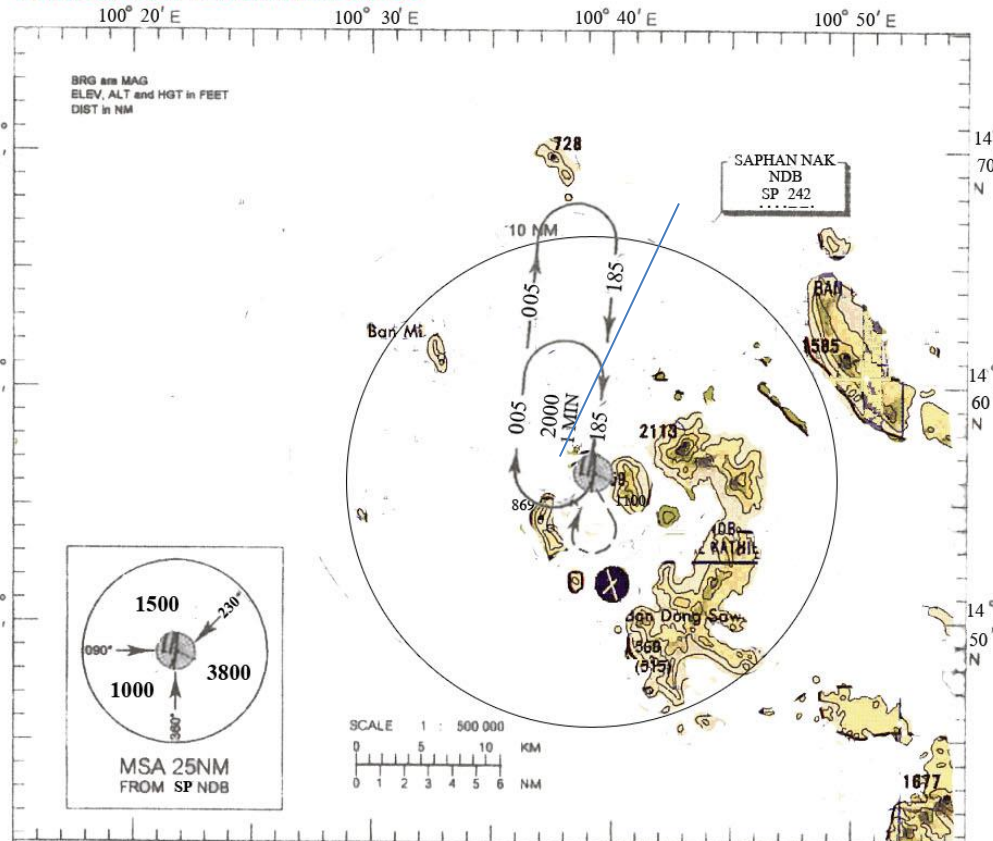

TA 11000

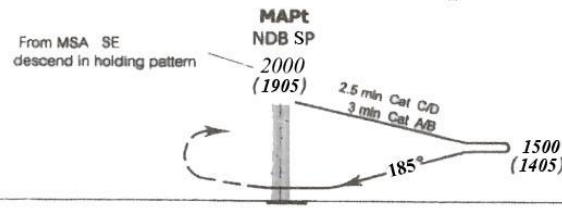

MISSED APPROACH : Climb left turn to HDG 155 to ALT 1000 ft or above then turn right direct to SP and hold or as directed by ATC

CATEGORY	A	B
Straight - In approach	500 (405)	
Circling	700 (605)	800 (705)




VTBH
6 JAN 14

INSTRUMENT AERODROME ELEV. 95 ft
APPROACH HEIGHTS RELATED TO
CHART AERODROME ELEV.

SAPHAN NAK/Saphan nak
VOR DME
RWY 19

TWR : 122.1, 234.5

FOR AAVNS TRAINING ONLY

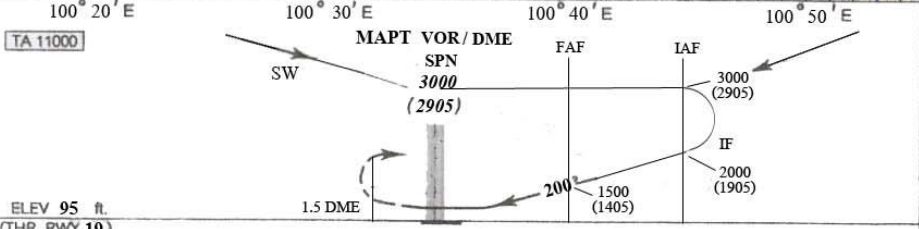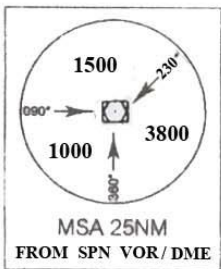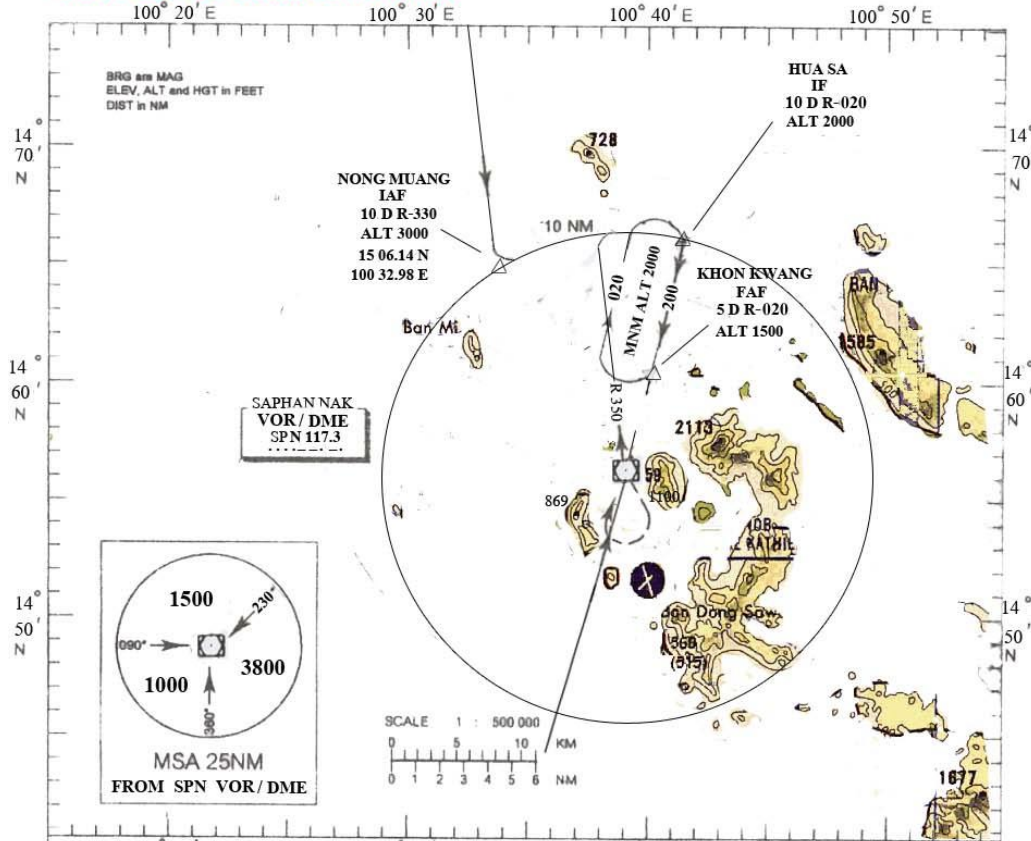

MISSED APPROACH : Climb left turn to HDG 155 to 1.5 DME at 1000 ft or above then turn right intercept R200 cross SPN at 1500 ft or above direct to FAF 2000 ft and hold or as directed by ATC

CATEGORY	A	B
Straight - In approach	500 (405)	
Circling	700 (605)	800 (705)